

**All** RSI Video Technologies control panels come equipped with an Auto Re-Arm feature.

The Auto Re-Arm feature is designed to arm the system after X number of minutes up to 2880min (2-days) after a disarm is read by the panel.

Example: Construction Sites: Project manager disarms the system at 7am every day and the site needs to be armed by 8pm but the manager may not be there to re-arm the system and no one is supposed to be there after 8pm. The Auto Re-Arm would need to be set to arm 780 minutes after the disarm.

**Along with the Auto Re-Arm you will need to set the panel to transmit Openings and Closings so that the Central Station can keep track of the panel and verify the auto closing, as well as make sure all devices are in area 1 so that they will not be bypassed during the auto arming.**

The following instructions will explain how to set up the auto re-arm after you have completed initial programming:

With the display showing the date and time stamp along with the current Access Level. You must be in access level 4.

Using the RIGHT ARROW go to CONFIGURATION and press YES. The display will show BADGE OR CODE. Enter your installer code followed by YES.

Display will show GENERAL PARAMETERS. Press the LEFT ARROW until the display shows AREAS AND DEVICES. Press YES.

Display will show DEVICES. Press the LEFT ARROW until you see AUTOARMING DELAY DISABLED. Press YES and enter the number of minutes followed by YES.

Once you have completed the process, press and hold the ESC/ NO key for 5 seconds to return to the main menu.



DATE / TIME  
DISARMED LVL: 1

DATE / TIME  
DISARMED LVL: 4

CONFIGURATION

AREAS AND DEVICES

AUTOARMING DELAY:  
####