



XTender Mode XT200/XT600/XT700

Auteurs : Frédéric LANCELIN
Diffusion : RSI Video Technologies
Date : 23/12/2010
Ref : XTx00 Application Note_EN.doc
Version : 1.0 – FR

Suivi des versions :


Date	Version	Auteur	Modifications
23/12/2010	0.1	F. LANCELIN	Creation
23/12/2010	1.0	F. LANCELIN	More Specs

1. Introduction

This is a short application note on the usage of the XT range of product when used in the XTender mode.

2. Architecture


When in XTender mode, the XT is being armed only from a "host" system, most likely through the outputs of another alarm system.

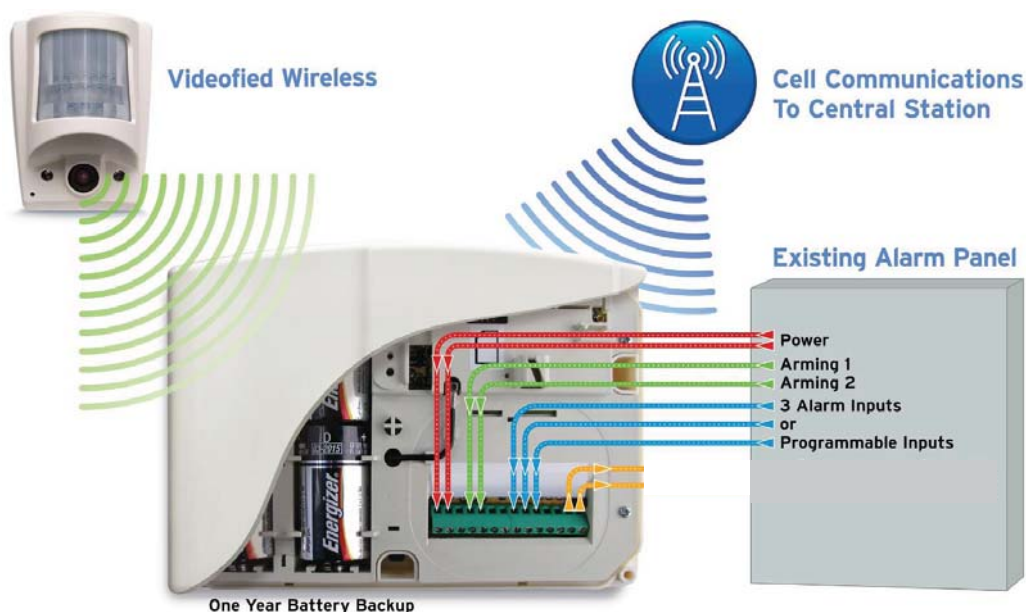

3. Wiring


In order to arm the XT, you must apply a latching +12V to Arming Input 1 or 2.

Arming Input 1 will arm Area 1 and 2.
Arming Input 2 will arm Area 3 and 4.

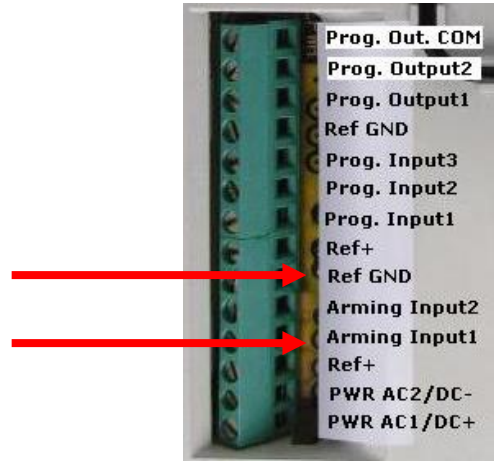

4. XTender Mode Menus

The XTender mode is available through the following menus :

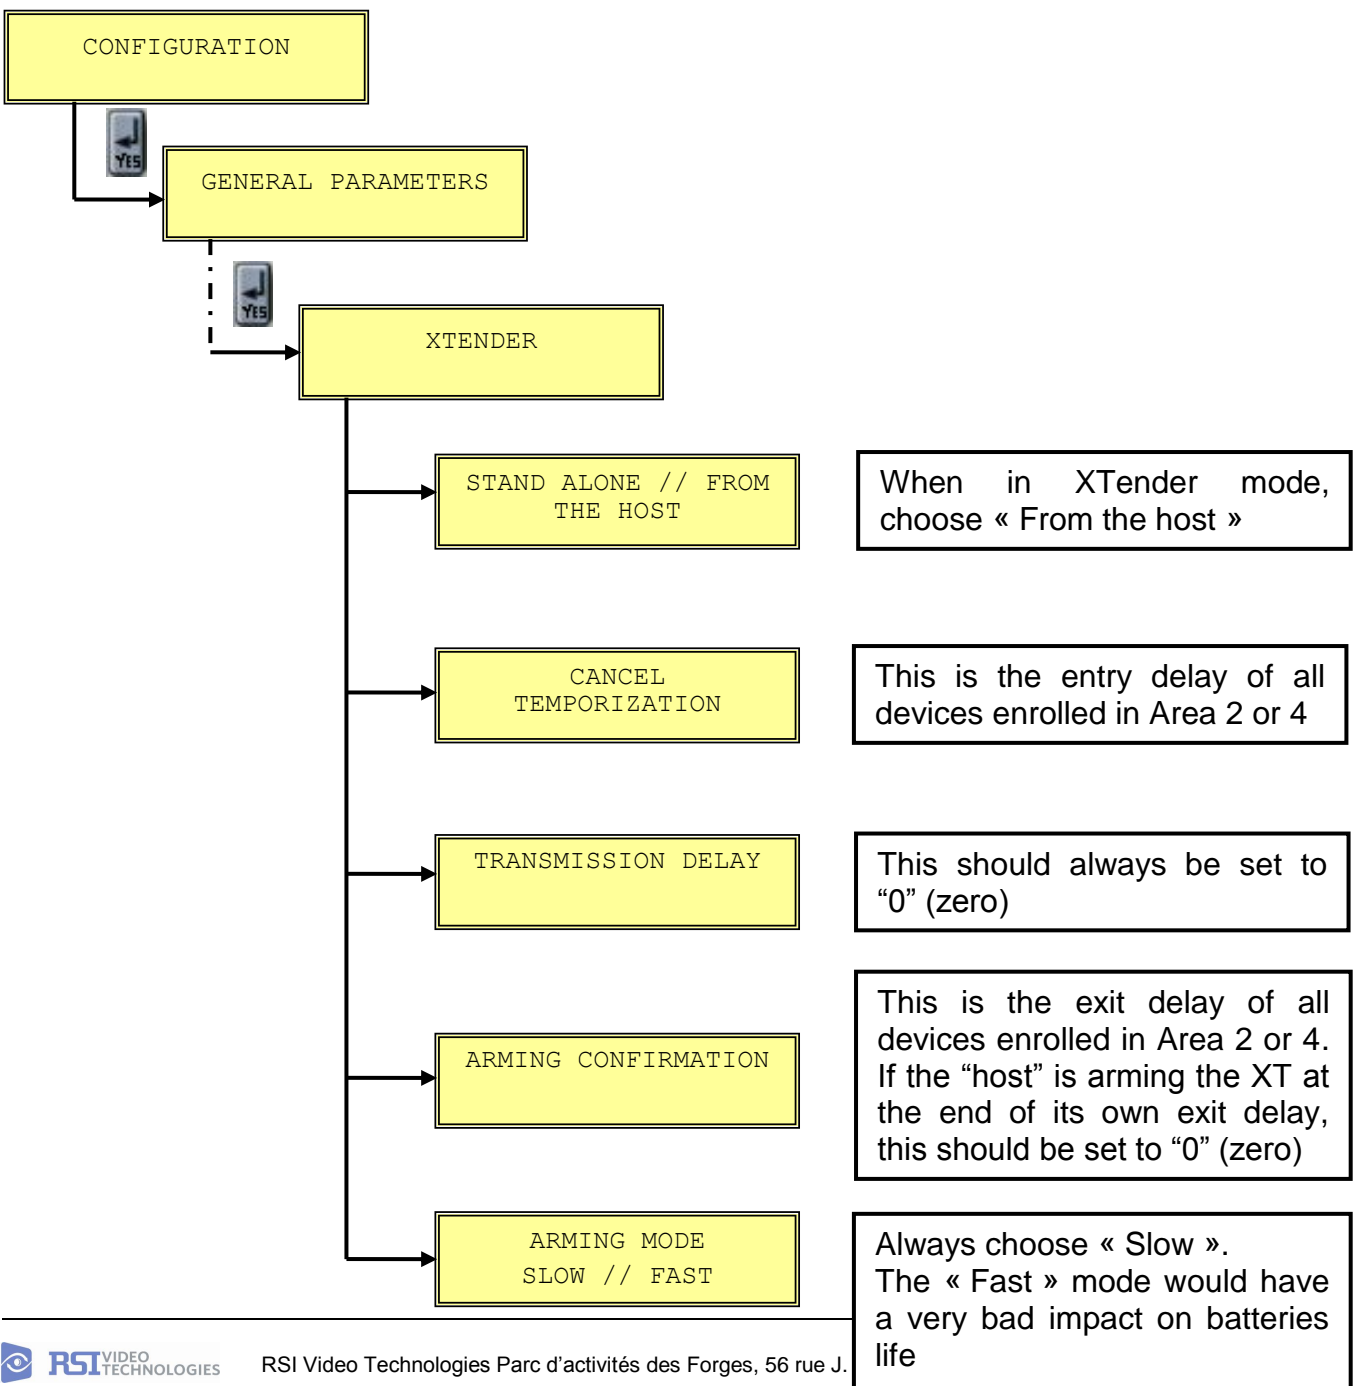

When in Xtender mode, Area 1 and 3 are delayed, Area 2 and 4 are instant.
When in XTender mode, the control panel can NOT be armed via its Keypad, remote control or fob reader. It can be armed only through its Arming Inputs.

5. Tech Support

Questions can be directed to www.videofied.com under the technical support tab or directly to support@videofied.com.