

The RSI Video Technologies XT600 series control panels allow you to enter an IP/Domain name that will only be used when the 9 key is hit 6 times or when the Ringtone feature is activated.

The Ringtone feature is activated in the software of the control panel. In order to use the feature the panel must be powered by a 12v transformer because the Cellular modem will be turned always on.

Even though Videofied uses the data side of the network a SIM card will have a phone number associated with it. When the Ringtone feature is activated and the modem is always on the Videofied control panel will be looking for a call on the GPRS modem. When it sees a call it will answer and hang-up then immediately attempt to send a 'Remote Maintenance Request' to the IP/Domain name entered into TMTIP or TMT DOMAIN.

Required Products:

XT600 or XL600 series control panel

CMA601 Alphanumeric keypad

PP4 XT power kit. 12V power supply + 4 Dcell Alkaline

Unlimited Data package on SIM required

When installing a system that will utilize the RINGTONE feature you will need to keep track of the phone number associated with the SIM card the is being installed. This information can only be provided by your Cellular Provider.

The following instructions will explain how to program the Ringtone feature of the control panel.

With the display showing the date and time stamp along with the current Access Level. You must change your Access Level to 4. RIGHT ARROW to ACCESS LEVEL and press YES, RIGHT ARROW to ACCESS LVL: 4 and press YES. When prompted with BADGE OR CODE enter your installer code + YES.



DATE / TIME DISARMED LVL: 3

ACCESS LEVEL 4

Using the RIGHT ARROW go to CONFIGURATION and press YES, when prompted with BADGE OR CODE, enter your installer code + YES.

CONFIGURATION

With the display showing GENERAL PARAMETERS press the YES key. Use the LEFT ARROW and go to GPRS PARAMETERS and press YES.

GPRS PARAMETERS

The display will show APN CODE. Press the LEFT ARROW key until the display shows RINGTONE OFF press YES and use the arrow keys to toggle the parameter to RINGTONE: AUTO and press YES

RINGTONE
AUTO

OFF - The modem will only be turned on during event transmission and the unit will not respond to a call on the phone number.

AUTO - The GPRS modem will be Always On. When a call is received the unit will send a 'Remote Maintenance Request'

FAQ

Q: Can I use solely Lithium Batteries to power the system with Ringtone enabled?

A: No. The system must be powered in order for the Ringtone feature to function properly.

Q: Can the ringtone be used to arm/disarm the system?

A: No: The ringtone feature can only transmit a 'Remote Maintenance Request'.

